MOTOPLASTIC, S.A.
Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN
Tel. 34 93 849 06 33 - Fax 34 93 849 09 88
info@puig.tv - info@puigusa.com
www.puig.tv - **www.puigusa.com**

CARENABRÍS CITY ADAPTABLE A -
WINDSHIELD CITY ADAPTABLE A - WINDSCHUTZSCHEIBE CITY FÜR

UNIVERSAL

Mod.: SPORT
Ref.: 0661H

Mod.: TOURING
Ref.: 0572H



PREVENCIÓN

- Usar agua y jabón neutro para limpiar la pantalla.
- Revisar periódicamente el apriete de la tornillería.
- Estacionar el scooter en dirección al sol, evitando el efecto lupa que puede dañar algunas partes.
- Aparcar si es posible en superficies niveladas.


Gracias por su atención.

PREVENTION

- Use water and neutral soap to clean the windshield.
- Check the tightening of the fasteners peridiocally.
- Park the scooter facing the sun, avoiding the sun-reflection effect that may damage some parts.
- Park if possible on even surfaces.

Thanks for your attention.

ID.	DESCRIPCIÓN	DESCRIPTION	QTY.
1	Pantalla	Windshield	1
2	Tapa exterior	Exterior cap	2
3	Soporte rótula exterior	Ball bearing exterior support	2
4	Soporte rótula interior	Ball bearing interior support	2
5	Tornillo allen M5x20 DIN912 Inox	M5x20 DIN912 allen screw Inox	4
6	Tuerca M5 DIN982 autofrenado Inox	M5 DIN982 lock nut Inox	4
7	Tornillo phillips M5x13	M5x13 phillips screw	4
8	Varilla con rótula central Ø9x200	Rod with central ball bearing Ø9x200	2
9	Tapón final varilla	Final bar cap	2
10	Tornillo M8x40 DIN912	M8x40 DIN912 screw	2
11	Soporte guía sujección varilla	Rod guide support	2
12	Acoplamiento esquadra	Coupling angle	2
13	Esquadra ref.:581	Angle ref.:581	2
14	Soporte retrovisor Ø8xØ8	Mirror support Ø8xØ8	2
15	Tornillo M8x30	M8x30 screw	2
16	Tuerca M8	M8 nut	2
17	Caperuza plana M6	M6 nut cover	4
18	Caperuza plana M8	M8 nut cover	4
19	Casquillo Ø8xØ14x6/12	Ø8xØ14x6/12 spacer	2
20	Tuerca M8 DIN6923	M8 DIN6923 nut	2
21	Tapón tornillo M8 DIN912	M8 DIN912 screw cap	2
22	Adaptador hex. rosca ext.izq.M8 a rosca int.M8	Adapter hex. thread ext.left M8 to thread int.M8	2
23	Adaptador hex. rosca ext.M10 a rosca int.M8	Adapter hex. thread ext.M10 to thread int.M8	2
24	Adaptador hex. rosca ext.izq.M10 a rosca int.M8	Adapter hex. thread ext.left M10 to thread int.M8	2
25	Adaptador hex. rosca int.izq.M8 a rosca ext.M8	Adapter hex. thread int.left M8 to thread ext.M8	2
26	Adaptador hex. rosca int.M10 a rosca ext.M8	Adapter hex. thread int.M10 to thread ext.M8	2
27	Adaptador hex. rosca int.izq.M10 a rosca ext.M8	Adapter hex. thread int.left M10 to thread ext.M8	2

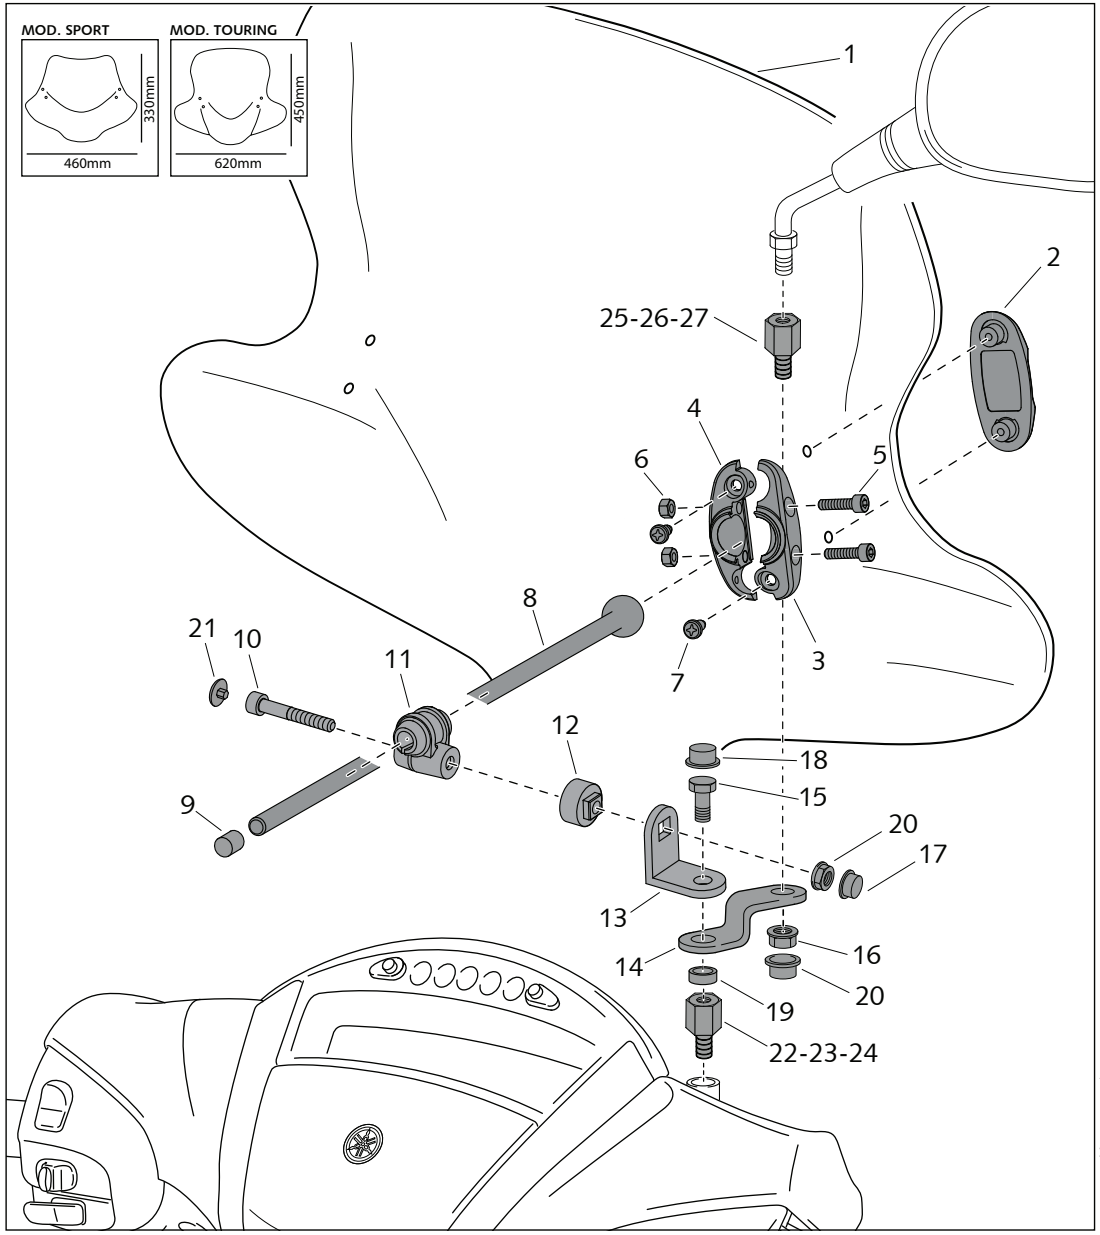

Created by: www.rdisseny.com